

Move the lock



1 Remove the two screws for the lock at the reverse side of the post.



2 Turn the lock 180°



3 Replace the screws.

Move the handle



1 Remove the two screws for the handle at the reverse side of the post.



2 Move the handle to the left side.




3 Replace the screws.

Change the door

for opening at the right side
(**Straight door**, item IS-DOOR-S)




Standard opening

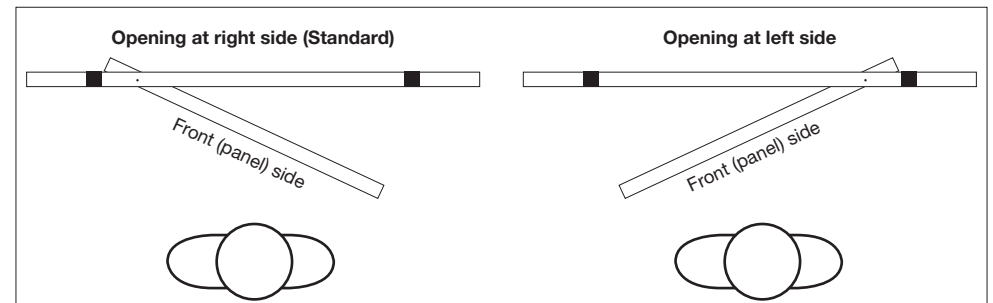


Standard configuration

with opening at the right side

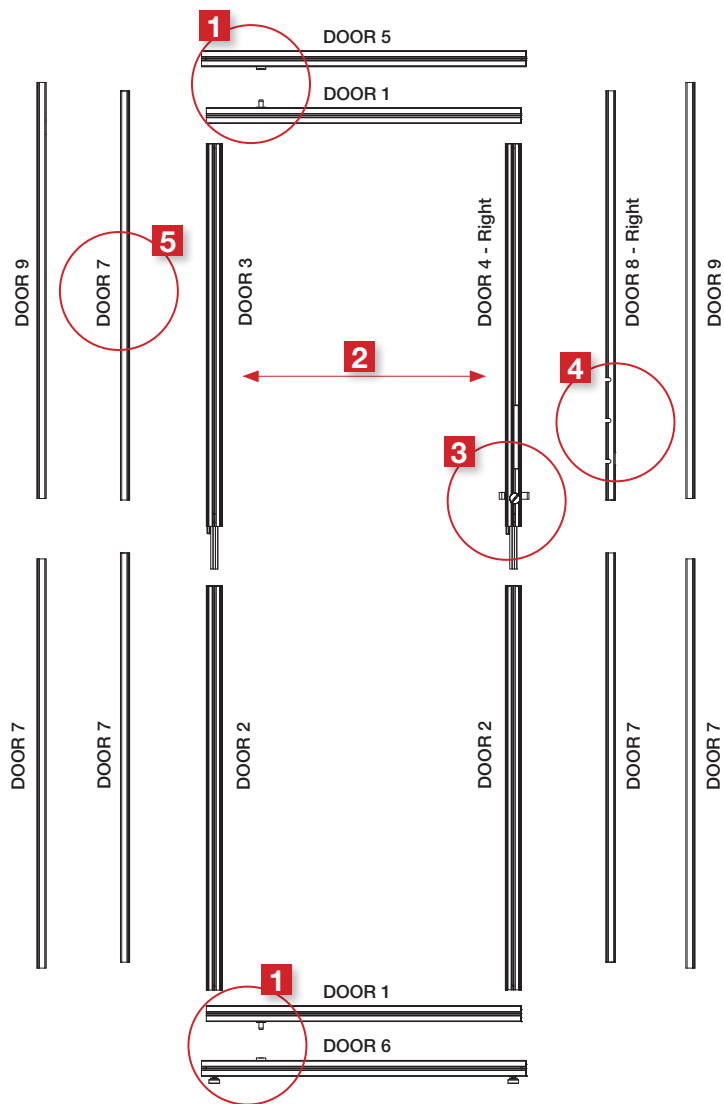

New configuration

with opening at the left side

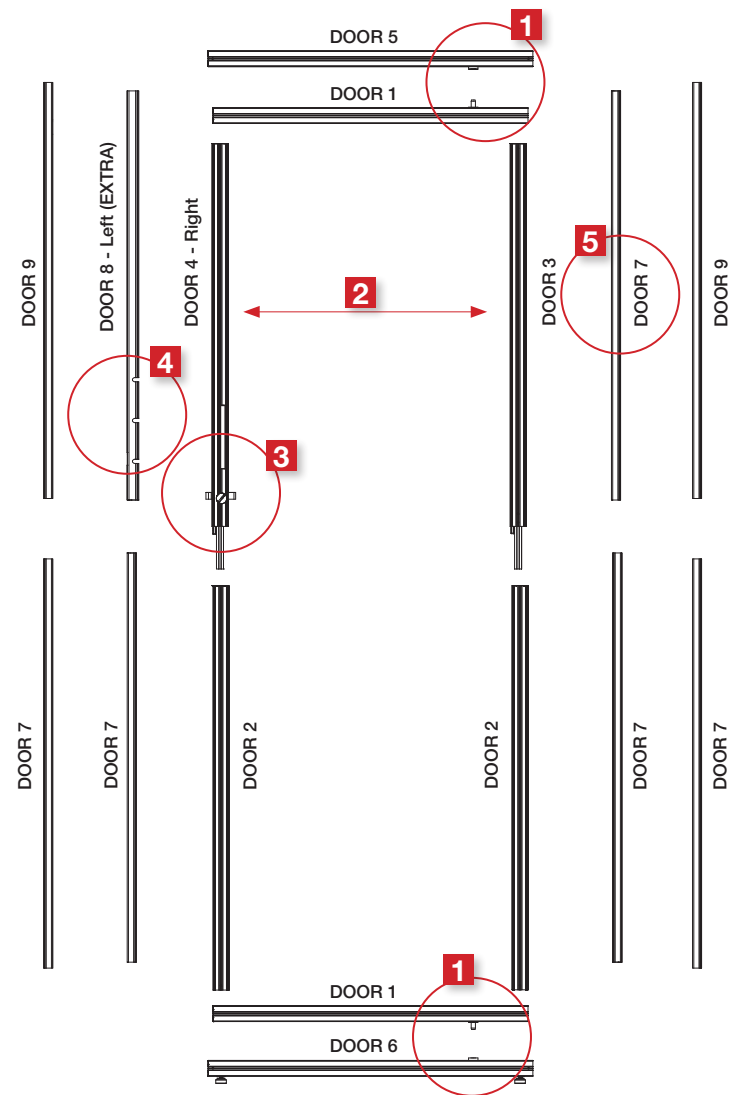

1. Flip the beams DOOR 1, DOOR 5 and DOOR 6 horizontally
2. Exchange the post DOOR 3 and DOOR 4 with each other
3. Change the handle and the lock (see page 4)
4. Delete the corner trim DOOR 8-RIGHT and place the DOOR 8-LEFT in the left side
5. Move the top corner trim DOOR 7 to the right side