


Twist Lock

To attach two profiles/frames to each other
IS-9339



1 Drill a 13 mm hole in the center of that profile you want to insert a Twist Lock.
Some profiles are predrilled from the factory.

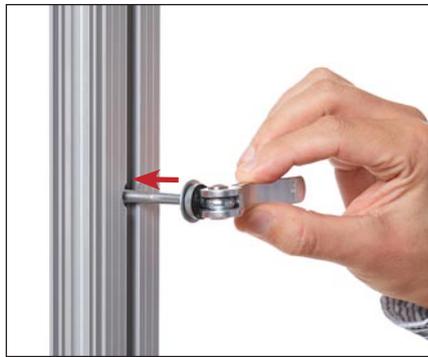

2 Push the Twist Lock pin into and through the drilled hole.



3 Bring the second profile/frame into contact with the clamp pin. Holding the clamp handle perpendicular to the profile will provide proper pin alignment.



4 Twist the handle 90°



5 Bend the handle over and lock the clamp.



6 You are now ready and the two profiles are now connected.

